
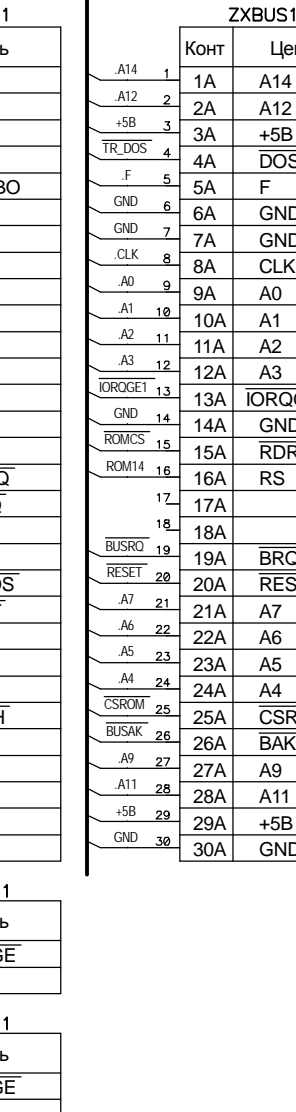
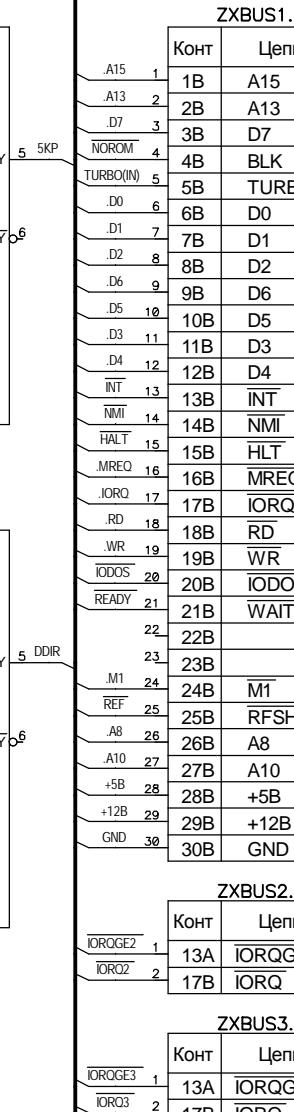
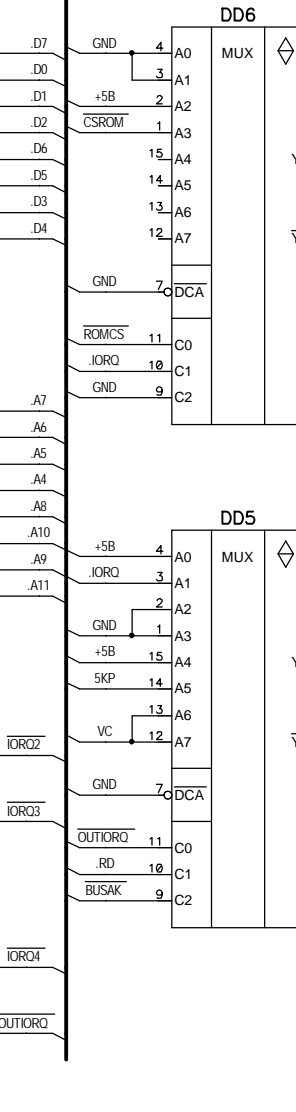
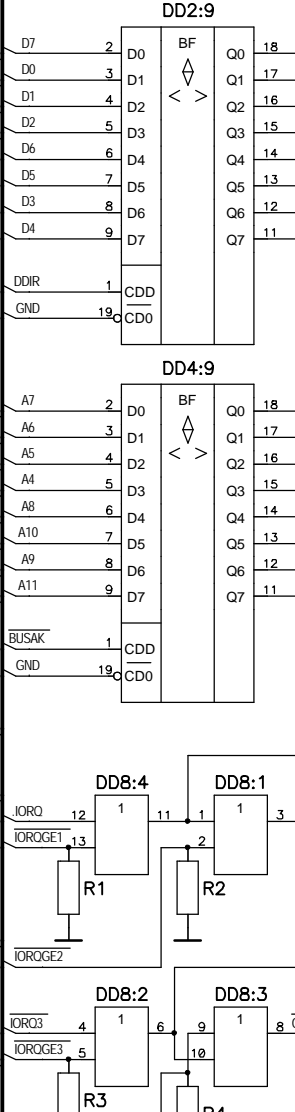


SYS_BUS1:1		
Цепь	Конт	
	A1	1
LEFT	A2	2
A14	A3	3
A12	A4	4
+5B	A5	5
F	A6	6
CLK	A7	7
GND	A8	8
GND	A9	9
CLCAY	A10	10
A0	A11	11
A1	A12	12
A2	A13	13
A3	A14	14
OUTIORQ	A15	15
GND	A16	16
-5B	A17	17
	A18	18
	A19	19
CSROM	A20	20
BUSRQ	A21	21
RESET	A22	22
A7	A23	23
A6	A24	24
A5	A25	25
A4	A26	26
ROMCS	A27	27
BUSAK	A28	28
A9	A29	29
A11	A30	30
ROM14	A31	31
	A32	32

SYS_BUS1:2		
Цепь	Конт	
TURBO	B1	33
RIGHT	B2	34
A15	B3	35
A13	B4	36
D7	B5	37
NOROM	B6	38
TURBO(IN)	B7	39
D0	B8	40
D1	B9	41
D2	B10	42
D6	B11	43
D5	B12	44
D3	B13	45
D4	B14	46
INT	B15	47
NMI	B16	48
HALT	B17	49
MREQ	B18	50
IORQ	B19	51
RD	B20	52
WR	B21	53
12MHz	B22	54
READY	B23	55
+12B	B24	56
TIMER	B25	57
M1	B26	58
REF	B27	59
A8	B28	60
A10	B29	61
CP/M	B30	62
TR_DOS	B31	63
BLOK	B32	64

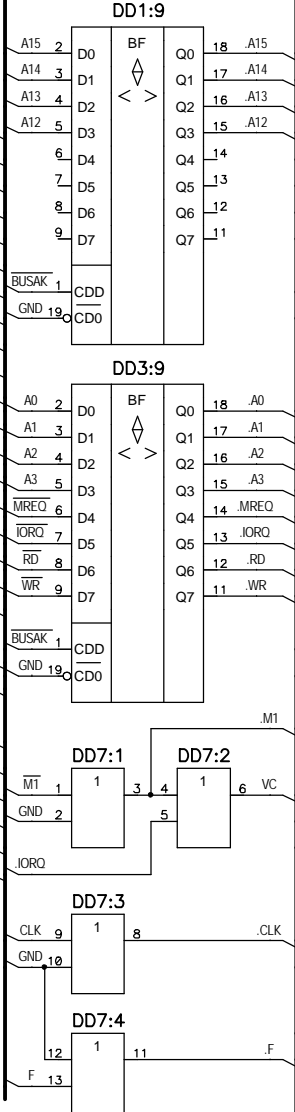

DD1-DD4 - 1533АП6 (so120)
DD5, DD6 - 1533КП15 (so16)
DD7, DD8 - 1533ЛЛ1 (so14)
R1-R4 - 680 Ом (0805)
C1-C10, C17-C19-0,1мкФ(0805)
C11-C16 - 100мкФ-16В(1812)
SYS_BUS1 - DIN 41612B-64F
ZXBUS1 - ZXBUS4 - SL-62

X-TRADE 1998

solegstar 2011

zx.pk.ru